

PLAYMAKER LCD

**THE ULTIMATE COACHING BOARD
20" INSTRUCTION MANUAL**



 
Thank you for your purchase of Playmaker LCD, the ultimate coaching board. Please read this instruction manual carefully, as it contains important information regarding the use and care of your Playmaker LCD.

Package Contents

- Playmaker LCD
- Stylus
- Instruction Manual

Please visit playmakerlcd.com to purchase additional accessories including extra stylus' and protective cases.

Product Design

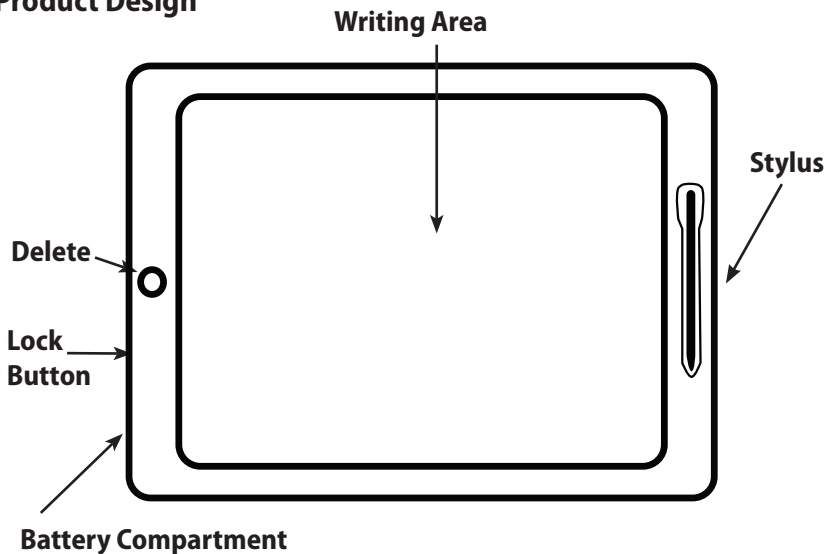

Instructions for Use

The Playmaker LCD ships in “lock mode” to prevent the batteries from being depleted during transit. Please unlock the board before using (*see product design diagram for location of the lock button*).

To begin using the board remove the stylus from the holder. Use the stylus to begin drawing on the screen. For best results avoid pressing your hand against the screen while drawing. You should only use the included stylus or similar object when drawing on the board. Please avoid using any sharp objects as they may do permanent damage to the LCD screen.

To erase all information press the “delete” key. You will see a momentary flash, this is normal operation. After pressing the “delete” key, the board will process an erase operation that will last approximately 2 seconds. If you write on the board while this operation is still being processed it will not appear. Please allow sufficient time for the erase operation to complete prior to writing on the board.

Batteries

 
Power for Playmaker LCD is provided by 2 x 2032 batteries. The batteries will last approximately one year with regular use. The board does not require power while drawing, and only uses power while the board is being erased.

Replacement batteries are available at most retailers where batteries are sold. Be sure to insert the battery as per the battery orientation diagram. The battery orientation is important and the device will not function if the batteries are not properly inserted.

Battery Orientation Diagram

The positive side of the battery should make contact with the positive marking side of the battery cover. The negative side of the battery goes down in the battery compartment.

Proper Orientation

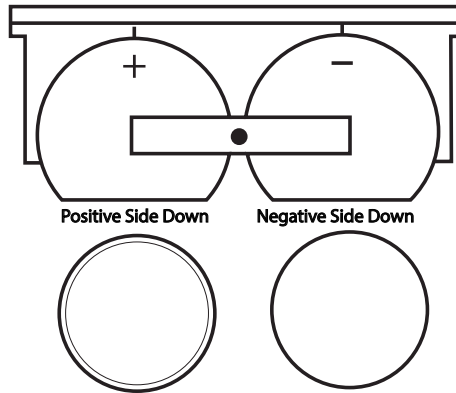

Lock Button

Playmaker LCD features a lock button that will prevent any drawings from being accidentally erased (*see product design diagram for location of the lock button*).

The lock button is helpful in situations when you have a drawing on the board that you would like to ensure is not accidentally erased. When the board is locked, you will still be able to draw on the board, as it will only prevent the current drawings from being accidentally erased. We also recommend locking the board when not in use, as this will prevent premature battery depletion due to accidental presses of the delete button.

Use and Care

Playmaker LCD uses a Liquid Crystal Display, so please handle with care. It is likely to survive most minor drops and falls, but better to not test that out just in case. Please also ensure it is not placed in an area where pucks or balls are likely to come into direct contact with the display, as this may do permanent damage.

DO NOT store Playmaker LCD in an area where it will be exposed to extreme temperatures for a long period of time. (*i.e. overnight in a car during a very cold night, or in the afternoon in the hot summer sun*). When using in a hockey arena, do not lay the board flat on the ice or store the board in a refrigerated area. Playmaker LCD will maintain proper operation for a minimum of two hours in temperatures as low as -20 degrees, but should not be stored in extremely cold temperatures. If Playmaker LCD exhibits erratic performance when exposed to extremely cold temperatures please discontinue use and move the board to a room temperature environment.

DO NOT expose Playmaker LCD to excess moisture. If it begins to rain while using Playmaker LCD it should be put away in a dry location.

Registration

Be sure to register your purchase by visiting PlaymakerLCD.com

Warranty

Your Playmaker LCD product is warranted against defects in material and workmanship for 1 year from the date of purchase when purchased from an authorized reseller. This does not cover damage from improper or unreasonable use, excess moisture, or unauthorized tampering, alteration or modification. To obtain support or warranty information regarding Playmaker LCD please email support@playmakerlcd.com.